INSULTAC BP BATTERY POWERED APPLICATOR

DESCRIPTION & USE

Insultac Battery Powered Applicator is specially designed to be used with the Insultac family of adhesives and sealants. The tool is powered by a 14.4 volt rechargeable battery.

FEATURES & BENEFITS

Battery powered - portable, no cords or hoses.

Quick and easy to use - saves time and labour.

Motor runs on lower amps - extends overall battery life and reduces charging time.

Unique and durable carriage design - allows the user to install adhesive in an upright position eliminating back strain.

PACKAGING

Complete Applicator Kit - includes 2 rechargeable NiMH batteries, 1 battery charger, and 1 detachable carriage handle.

USER INSTRUCTIONS

- Assemble carriage handle using the provided (4) screws and lock nuts with the wrench and allen key (also included).
- Allow movement of the racks by opening the clutch lever. Retract the rack by pulling the rack handle away from the tool.
- Prepare adhesive cartridge by removing caps or plugs and installing static mixing nozzle.
 - Note: Follow adhesive manufacturer's complete instructions for cartridge preparation.
- Insert the cartridge into the cartridge holder. Align the cartridge and the cartridge nozzle opening for proper positionina.
- Push the rack handle forward, lining up pistons with the openings on the cartridge. Close the clutch lever to engage clutch.
- Slide the battery onto the handle until it is fully engaged.
- Adjust speed control knob to desired flow. Full speed is designated on the knob by the largest "bubble" symbol. Slower speeds; smaller bubbles.

Note: Most applications will require the tool to be operated at full speed.

Ontario & Western Canada

1.800.268.2889



Hold trigger to begin dispensing adhesive.

Note: Trigger must be depressed 2 times before tool is to be operated when it has remained idle. This is a power saving feature built into the tool.

When finished dispensing, or when end of cartridge is reached, release trigger, open clutch, then retract rack. Remove cartridge.

Maintenance Instructions

- Keep handles clean, dry and free of oil or grease.
- Clean with mild soap and damp cloth. Do not use solvents or cleaning agents that can damage the tools plastic parts.
- Follow cleaning and maintenance instructions in battery charger manual and battery pack leaflet
- Remove adhesive residue from rack and pistons regularly if present. Apply light coating of light machine oil to lubricate rack as needed.
- For internal lubrication and all other maintenance, except external cleaning and battery pack recharging, and for all repairs, return to service center, distributor, or manufacturer.
- If the tool is not running at full capacity, check to be sure that the battery pack is fully charged and that the contacts on the battery pack and tool are both clean. If they need maintenance, use caution and clean with an eraser.



ROOFMAX INSULTAC BP

BATTERY POWERED APPLICATOR

Service

Tool service must be performed only by qualified repair personnel. Service or maintenance performed by unqualified personnel may result in risk of an injury. Do not disassemble tool or battery pack. At the conclusion of its useful life, remove battery pack from tool. Without further disassembly, return battery pack intact for recycling and/or discard tool intact. Information on battery pack recycling can be found in the Instruction Manual provided with the tool. Disassembly and reassembly may create an unsafe condition. When servicing a tool, use only identical replacement parts. Use of unauthorized parts or failure to follow maintenance instructions may create a risk of electrical shock or injury.

SAFETY RECOMMENDATIONS

Protective equipment such as safety glasses and protective gloves must be worn when operating or servicing this tool. The applicator should never be pointed at or near people. The applicator should never be operated when the outlet tip of the adhesive cartridge is blocked or restricted by cured adhesive, any object, or some part of the body.

Prior to working with this applicator thoroughly review the Instruction Manual provided with the tool.

