# SUREFLOW<sup>TM</sup> Retrofit Vandalproof Vent Caps

#### **DESCRIPTION & USE**

• Quick and easy way to prevent roof vent stacks from being accidentally or intentionally clogged by vandals

**Note:** Retrofit Vandalproof Caps are meant to be attached directly to exposed vent pipes that have been flashed to the roof with a single component low rise flashing. For vent pipes that have been flashed with a two piece flashing featuring a separate cap (i.e.: the Flash-Tite Standard Vent Stack Cover), you must use the non-retrofit style of Vandalproof Vent Stack Cap. Refer to Vandalproof Vent Stack Covers product data sheet for more information on this product.

## **FEATURES & BENEFITS**

- Vandalproof Design Prevents objects and debris from being jammed in the vent pipe
- Heavy Duty Construction Caps are constructed of heavy gauge metal to resist abuse and damage
- Quick & Easy to Install Caps attach directly to the ABS, PVC or cast Iron pipe!
- **Condensation Draining** Downward sloping cap design permits condensation to drain out of the cap

# **TECHNICAL DATA**

#### Construction

Base Metal:	1.6 mm Aluminum
Cap Metal:	2.0 mm Aluminum
Insect Screen:	Aluminum

STANDARD SIZES	
Nominal Pipe Size	Model No.
3″	RVC3
4″	RVC4



## **INSTALLATION**

- 1. Fit Cap directly over the top of the vent pipe and mark the location of the Cap screw holes on the pipe.
- 2. Remove the Cap. Drill a 3/8" diameter hole through both walls of the pipe at the location of the screw marks.
- 3. Return the Cap to the top of the vent pipe, lining up the holes. Insert the screws through the Cap and the pipe.

#### WARRANTY

This product is warranted against manufacturing defects for a period of 10 years.

#### **SPECIFICATION**

Roof vent pipes are to be fitted with Sure Flow<sup>™</sup> Retrofit Vandalproof Caps as manufactured by Lexcor (1.800.268.2889; www.lexcor.net). Caps shall consist of a conical heavy gauge aluminum cover, complete with an aluminum insect screen. Install in strict accordance with the manufacturer's directions and flash in to the roof membrane membrane in accordance with [the roofing membrane manufacturer's; NRCA; CRCA] directions and good roofing practice.


continued on back


Visit our video channels: https://vimeo.com/channels/lexcoren

.EXCOR

#### COMMERCIAL BUILDING PRODUCTS

Ontario & Western Canada 1.800.268.2889 Quebec & Eastern Canada 1.800.363.2307

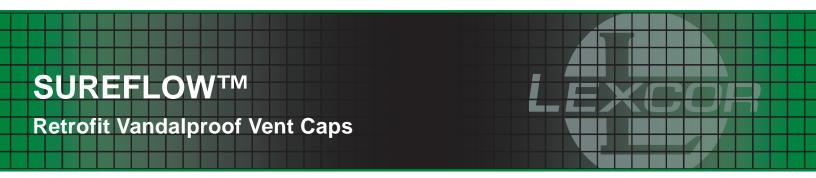

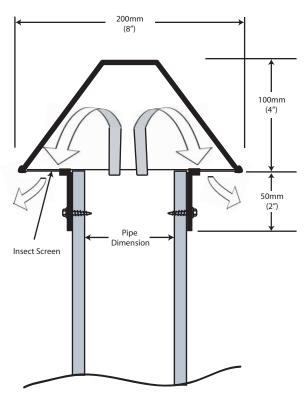

COMMERCIAL BUILDING PRODUCTS

LEXCOR

Ontario & Western Canada 1.800.268.2889 Quebec & Eastern Canada 1.800.363.2307